

Sukup 9400 Cultivator Specifications

Number of Rows	Row Spacing	Approx. Weight (lb.)	Transport Height	Transport Width	Folding Toolbar
2	48"	1680	6'	9'6"	no
4	30"	2525	6'	11'5"	no
4	36" - 38"	2600	6'	14'1"	no
4	38" - 40"	2625	6'	14'9"	no
4	48"	2660	6'	17'5"	no
6	20" - 22"	3375	6'	12'	no
6	30"	3450	6'	16'5"	no
6	36" - 38"	3525	6'	20'5"	no
6	36" - 40"	4200	12'4"	11'	yes
6	38" - 40"	3550	6'	21'5"	no
6	48"	4290	11'4"	14'2"	yes
8	20" - 22"	4225	6'	15'8"	no
8	30"	4350	6'	21'5"	no
8	30"	5025	11'	13'4"	yes
8	36" - 38"	4475	7'	26'9"	no
8	36" - 40"	5350	11'8"	16'5"	yes
8	38" - 40"	4500	7'	28'1"	no
10	30"	6125	11'2"	18'4"	yes
10	36" - 38"	7325	11'10"	22'6"	yes
12	20" - 22"*	6000	7'	23'	no
12	20"*	6700	11'2"	12'6"	yes
12	22"*	6775	11'3"	13'7"	yes
12	28" - 30"	7025	11'10"	17'6"	yes
12	30"	7025	11'8"	18'4"	yes
12	36" - 38"	8250	12'8"	22'6"	yes
16	20"*	9475	11'8"	15'10"	yes
16	22"*	9575	11'10"	17'1"	yes
16	30"	9950	12'8"	23'4"	yes
24	20"*	13,150	12'9"	22'6"	yes
24	22"*	13,300	12'11"	24'5"	yes

*These row spacings available in 9420 style only. All others available as either 9400 or 9420.

This information is intended to assist you in choosing the optimal equipment for your situation. Many factors can affect the operation of agricultural equipment and your results may vary. Thus, this information is not a guarantee of product specifications or performance. Based on these factors, Sukup specifications should only be used as estimates, and not as a warranty, express or implied, of how a particular Sukup unit will perform under your operating conditions. Because Sukup is constantly improving our products, changes may occur that may not be reflected in the specifications.